

Fig. 14—Grille Attachment—Belvedere

DOORS

The service procedures for internal door components do not include obvious operations, such as removing door or quarter panel trim panels, testing operation of windows or inspecting glass fit after adjustments or replacement have been performed.

ALIGNMENT**Up and Down**

Adjustment of the door can be made at either the

pillar or door hinge halves (Fig. 16).

Fore and Aft

Adjustment is made at the door hinge half. **Adjust only one hinge at a time.** Raising outer end of door moves upper part of door forward, when in closed position. Lowering lower part of door moves lower part forward, when in closed position.

In and Out

Adjustment is made at the pillar hinge half. **Adjust only one hinge at a time.** Raising outer end of door,

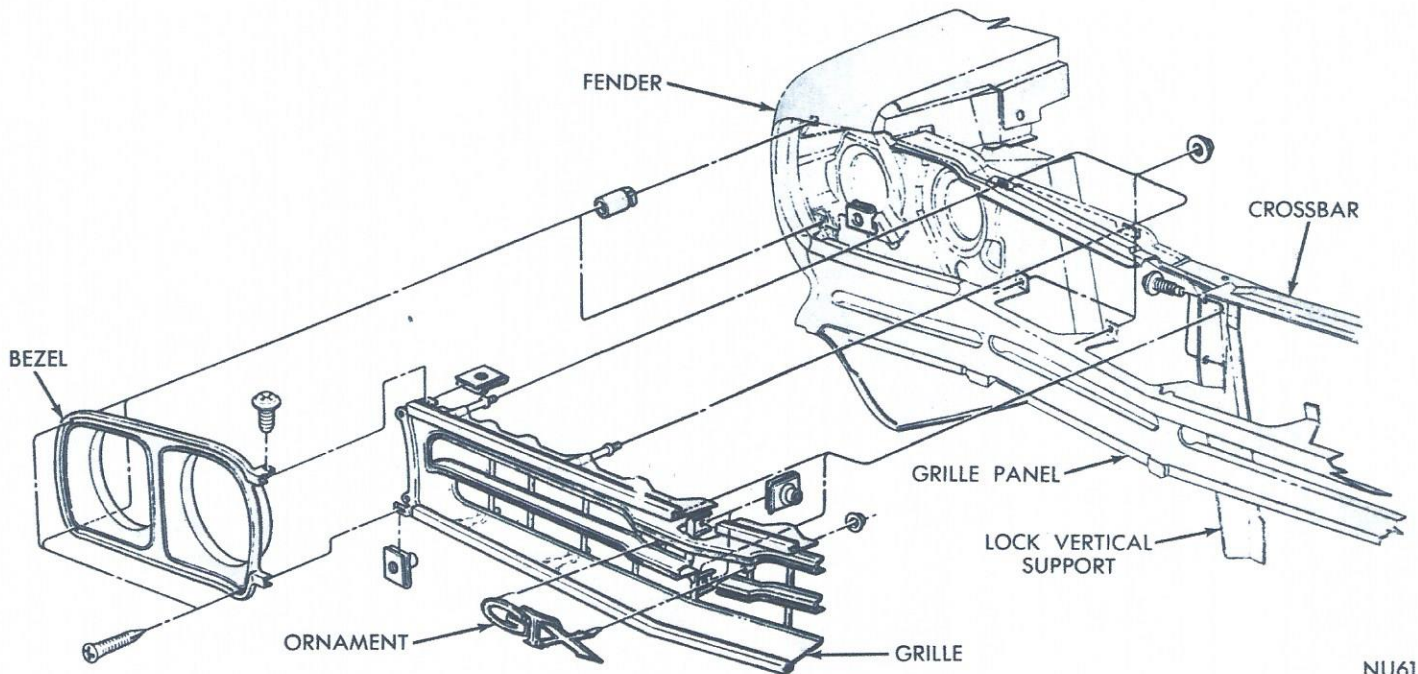


Fig. 15—Grille Attachment—Satellite—GTX