

PF486

Fig. 14—Grille Attachment—Two Door

Installation

(1) With door inner hardware installed, place door in position in door opening, supported by a padded jack.

On electric window lifts, install wiring in doors and attach to motor and control switch.

(2) Locate door hinge plates on door panel and install hinge attaching screws finger tight only.

(3) Adjust jack to align hinge plate scribe marks and tighten attaching screws.

(4) Complete door aligning procedure, and install door interior trim and hardware.

REAR DOOR (All Models)**Removal**

On vehicles with electric window lifts disconnect wires from motor and control switch and remove from door prior to door removal.

(1) Open rear door and place a padded jack under door near the hinges.

(2) Remove door interior trim and hardware.

(3) Scribe aligning marks around hinge plates on door frame.

(4) Remove hinge attaching screws from door and remove door from body.

Installation

(1) With rear door inner hardware installed, sup-


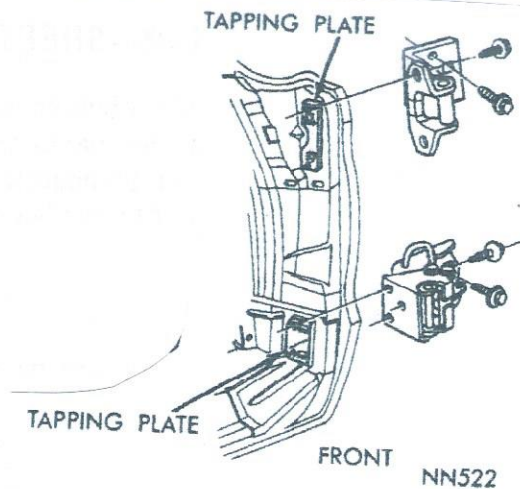


Fig. 13—Door Hinges

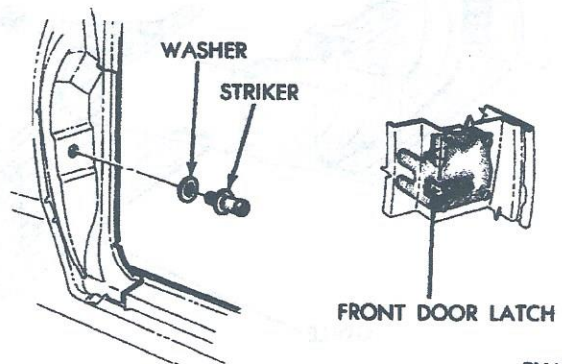

PY458

Fig. 16—Door Striker