

Fig. 4—Fuel Tank Assembly (115.8 inch W/B Vehicles) Sedans

on outer filler tube, outer filler vent tube, and atmospheric vent tube.

(2) Position Keystone clamp on outer filler tube, new Keystone clamp on outer filler vent tube, slide rubber elbows on tubes, and fasten clamps securely to avoid leaks.

(3) On station wagons, outer filler tube and rubber elbow assembly should be installed from underneath through floor pan, install attaching screws and tighten securely.

**REMOVING GAUGE UNIT (Sedans)
119.5" W/B MODELS**

The vehicle should be lifted with a frame type hoist to let the rear axle fall away from the body. Remove

tank unit, using Spanner wrench Tool C-3582.

**REMOVING FUEL TANK (Sedans)
119.5" W/B MODELS (Fig. 5)**

CAUTION: Be sure the Ignition Switch is turned OFF before disconnecting or connecting the gauge wire.

(1) Drain tank into a safety can, then disconnect fuel line, ground strap and wire lead to gauge unit.

(2) Disconnect vent tube at hose connection at leading edge of tank.

(3) Remove screw that attaches filler tube bracket to rear crossmember.

(4) Remove nuts that hold ends of fuel tank hold down straps to frame. Lower front end of tank far enough to disengage filler tube from rear panel and slide out from under vehicle.

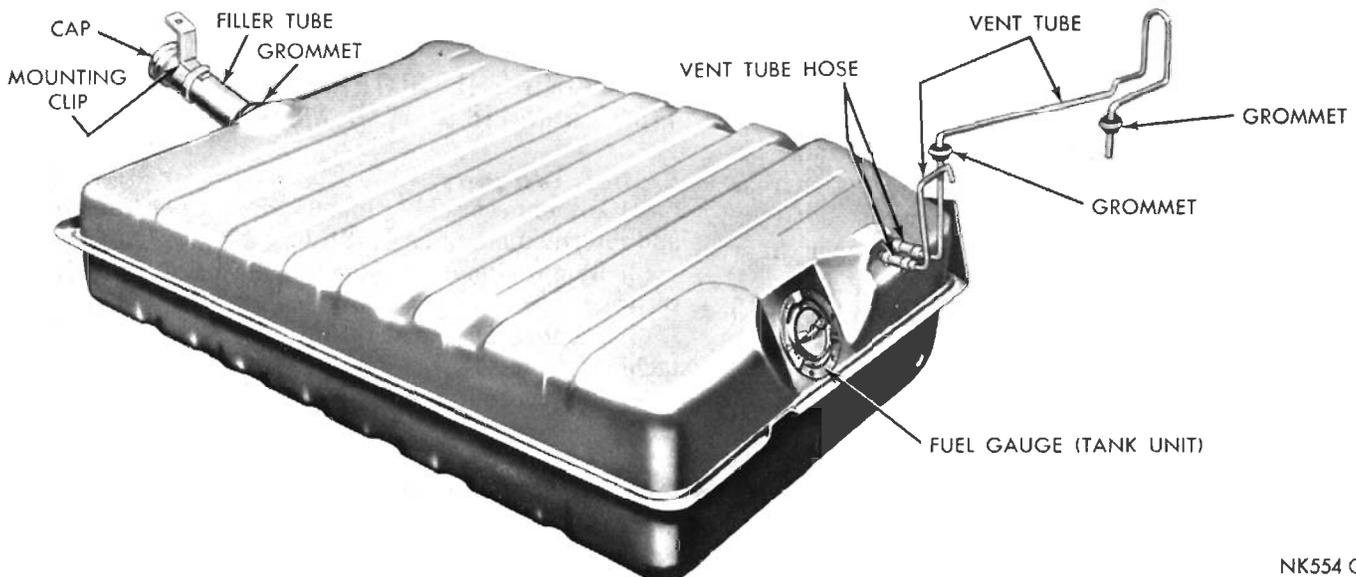


Fig. 5—Fuel Tank Mounting (119.5 inch W/B Vehicles)